# AUTOMATIC CONDENSATE DRAIN AOK 20SS ExFC

# DESCRIPTION


AOK 20SS ExFC has been developed for fully automatic discharging of condensate or other fluids from compressed air/gas system. Condensate accumulates in the stainless-steel reservoir and when the level of condensate is high enough it is being discharged from the system without any air losses. Direct acting valve is operated by precise level-controlled floater which assures reliable and efficient operation. Thanks to robust stainless-steel housing it is suitable for heavy duty applications.



## **TECHNICAL SPECIFICATION**

	Technical data	
Operating temperature	1,5 - 120 °C	35 – 248 °F
Operating pressure range	1,5 - 35 bar(g)	21,8 - 507 psi
Minimum recommended operating pressure	1,5bar(g)	21,8 psi
Operating media	Condensate (air, water, oil)	
Nominal discharge capacity	92 l/h (at 7barg)	139 l/h (at 16barg)
Discharge orifice cross section	1mm	0,0393 inch
Inlet connection	G ½" (NPT on request)	
Outlet connection	G ½" (NPT on request)	
Reservoir volume	0,4 l	
Weight	5,835 kg	
Dimensions (A x B x C)	157 mm x 100 mm x 100 mm	
Valve type	Direct acting, normally closed	

#### DIMENSIONS

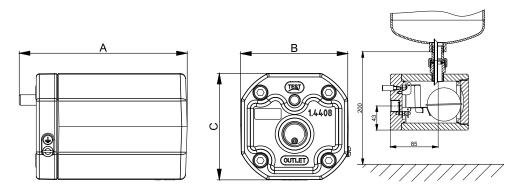

#### MATERIALS

Part	Material	
Housing material	Stainless steel 1.4404	
Fittings, Screws	Stainless steel 1.4404	
Floater	Stainless steel 1.4404	
Sealing	FKM	



#### **CALCULATION OF CAPACITY**

For rough calculation of discharge capacity at certain pressure use following equation:  $Q = 34\sqrt{\Delta p}$  Example: if operating at 7barg;  $Q = 34\sqrt{7} = 92$  l/h

### PRESSURE EQUIPMENT DIRECTIVE PED 2014/68/EU


Product	Category, module	
AOK 20SS ExFC	Not required	

#### MAINTENANCE

Once per year make a visual check of the drain and make sure there is no visual damage or leakage. Clean interior of the reservoir regularly. Intervals of cleaning depend on contamination of condensate. Replace the sealings if necessary.

#### RECCOMENDATIONS

- We recommend the use of ball valve between pressure vessel and inlet connection for easier maintenance.
- If strainer is installed make sure it is not clogged. Clogged strainer might prevent condensate flow into the condensate drain.
- We recommend to install nipple with venting tube to avoid generation of air bubbles.

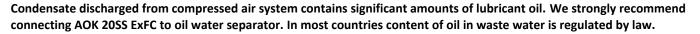

#### INFORMATION IN THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE



Our quality management system is certified by BUREAU VERITAS in conformity with ISO 9001:2015 Reg. number: SI008842



